

## **Readerware ID Tech EconoScan Barcode Reader Configuration**

Use this document to configure your ID Tech EconoScan Barcode Reader for use with Readerware products, simply scan down the page. Scan each barcode in order. If you have problems, scan from your manual using the group references supplied.


There appear to be some variations in the behavior of different EconoScan versions. Start by scanning the configuration barcodes. Then try scanning a UPC code from a CD, DVD or paperback book. Check to make sure that all the digits printed on the barcode label are input. If you notice that the leading digit is missing, scan the configuration barcodes again but this time omit the "Lead Digit No Send" barcode.

If you have any problems using your EconoScan barcode reader with Readerware products, please contact [support@readerware.com](mailto:support@readerware.com)

**Reset to default (Group 1):**



**EAN-13+5 (Group 30):**

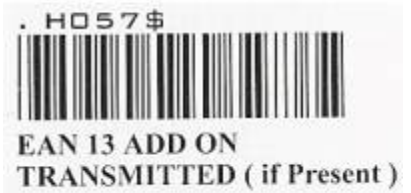

**UPC-A (Group 28):**

